

# 911 Extrication Gear

## Sizing Charts

Extrication Coat									
	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
Chest	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66	68-70
Sleeve	32	33	34	35	36	37	38	39	40

Extrication Pant									
	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
Waist	26-28	30-32	34-36	38-40	42-44	46-48	50-52	54-56	58-60

Inseams available in 2" increments.

Extrication Coveralls									
	S	M	L	XL	2XL	3XL	4XL	5XL	6XL
Chest	36-38	40-42	44-46	48-50	52-54	56-58	60-62	64-66	68-70
Inseam	30	30	30	30	30	30	30	30	30
Sleeve	33	34	35	36	37	38	39	40	41

**Tall coveralls** add 2" to the standard sleeve length, 2" to the inseam & 1" in the torso.

**Short coveralls** subtract 2" to the standard sleeve length, 2" in inseam & 1" in the torso.

If chest measurement falls between sizes, go up to next largest size.

